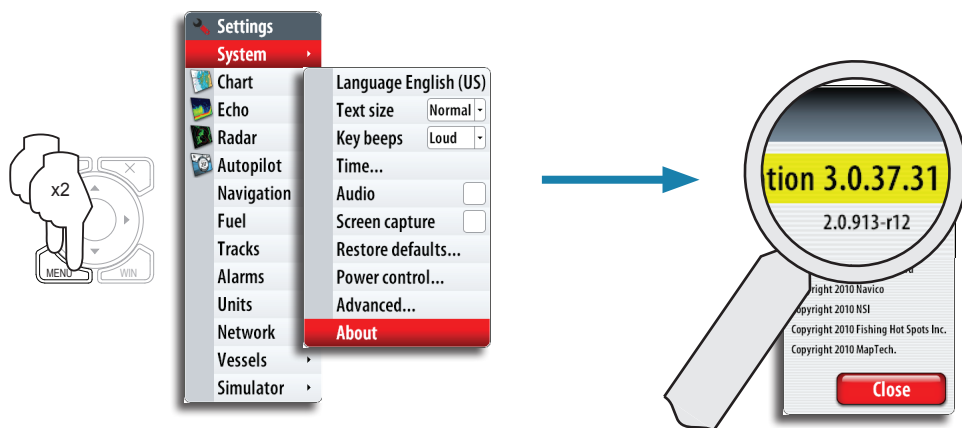


## Using BSM-2 with NSE displays

**Minimum sw requirement**

In order to use BSM-2 on Simrad NSE the minimum software requirement on the NSE is version 3.0.37.31. All units with a prior software version will need to download the software from the below link and update the unit(s).

**Download Software**

<http://www.simrad-yachting.com/simrad-bsm-2-software>

username: bsm2download

password: gyroscope

**Contact information**


If you have further queries, please contact your Regional Sales Manager, or you may contact Navico Technical Support, 800-324-0044 or [ns-support@navico.com](mailto:ns-support@navico.com).



## Using BSM-2 with NSE displays

**Minimum sw requirement**

In order to use BSM-2 on Simrad NSE the minimum software requirement on the NSE is version 3.0.37.31. All units with a prior software version will need to download the software from the below link and update the unit(s).

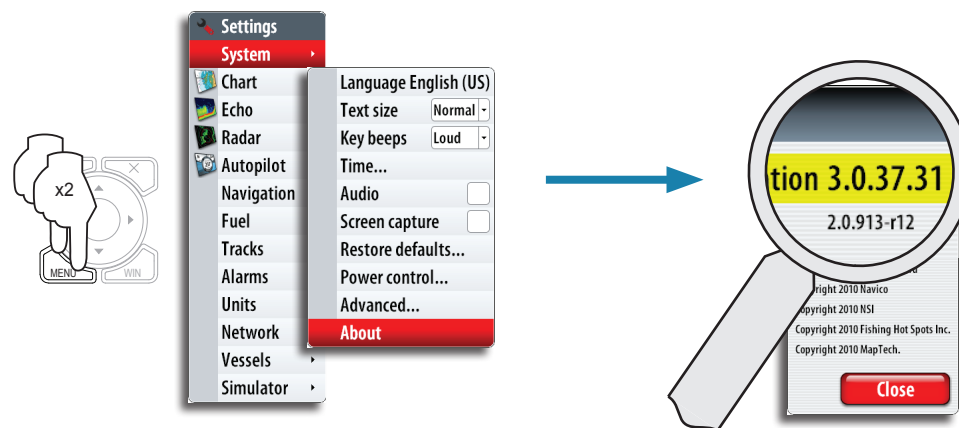**Download Software**

<http://www.simrad-yachting.com/simrad-bsm-2-software>

username: bsm2download

password: gyroscope

**Contact information**

If you have further queries, please contact your Regional Sales Manager, or you may contact Navico Technical Support, 800-324-0044 or [ns-support@navico.com](mailto:ns-support@navico.com).

