


Manual

Simrad IS20 Combi Instrument

English

Sw. 1.2

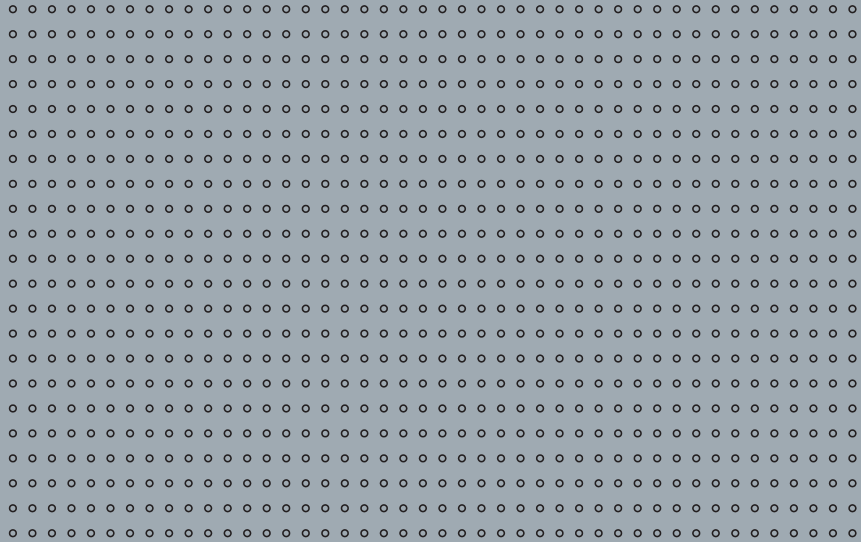

Manual

Simrad IS20 Combi Instrument

English

Sw.1.2

Document no: 20222774

Revision: B

Date: March 2008

The original language for this document is English. In the event of any discrepancy between translated versions and the English version of this document, the English document will be the official version.

To the best of our knowledge, the content in this publication was correct at the time of printing.

As we are continuously improving our products we retain the right to make changes to the product and the documentation at any time. Updated manuals are available from our website www.simrad-yachting.com, and are free to download.

© Copyright 2008 by Navico Holding AS.

About this manual

This manual is a reference guide for installing and operating the Simrad IS20 Combi instrument.

The manual does not include operator or installation procedures for sensors that can be connected to the system.

In this manual, names of menu commands, dialog box text and keys are written in boldface (e.g. **Main** menu, **Setup** command, **Left** key).

Important text that requires special attention from the reader is emphasized as follows:



Used to draw the reader's attention to a comment or some important information.



Used when it is necessary to warn personnel that a risk of damage to the equipment or hazard exists if care is not exercised.

Contents

1 Introduction	7
General information	7
Instrument layout	7
Screen symbols	8
IS20 system examples.....	8
2 Operation	11
Turning the IS20 on.....	11
Backlighting	12
Scrolling through data pages	13
Operating the menu system	14
Locking and unlocking the keys.....	16
Power save function	16
3 The log/timer functions.....	17
The timer function	17
Trip logging	20
Speed logging	21
4 Changing the default settings.....	23
General	23
Setting the damping factors	23
Alarm setup	24
Updating the data sources.....	26
Changing the display settings	28
Language selection	29

Changing the units of measure	30
Changing the SimNet group setup	30
5 IS20 Alarm system	33
Alarm indication.....	33
Acknowledging an alarm	34
Viewing active alarms	34
Alarm codes	34
6 Installation	37
Location of the unit	37
Mechanical installation	37
Cable connection	39
Demo mode	45
7 Configuration	47
First time start-up.....	47
Calibration	48
SimNet groups.....	52
8 Maintenance	53
General maintenance.....	53
Service information	53
Resetting the instrument system	54
Displaying instrument information	55

9 Spare parts	57
Spares and auxiliaries.....	57
SimNet cables and accessories	58
10 Specifications	59
Technical specifications.....	59
Dimensional drawings.....	60
Menu flow chart.....	61

Blank page

1 Introduction

General information

The IS20 Combi is an instrument that displays speed, depth and temperature data measured by sensors connected to the system.

Accumulated log and trip log as well as race log and timer are implemented.

Instrument layout



The IS20 has a 130 * 104 pixels LCD. The display may be set to red or white background color, and the contrast and light level are adjustable.

The instrument is equipped with 2 SimNet connectors.

Keys



The instrument is operated by 6 keys. These are used to adjust the light, scroll between data pages, to operate the menu and to set parameter values.

Softkeys







When the basic operation of the keys is changed, soft key symbols will be displayed right above the keys to indicate the alternate function.

The softkey symbols are illustrative, and they are described under the functions as these appear in this manual. The following general softkey symbols are used:

-  OK
-  Cancel

Screen symbols


The following symbols are used for depth readings:

	Decreasing depth
	Increasing depth
	Depth reading measured from keel
	Depth reading measured from water line


IS20 system examples

The IS20 may be installed as a stand-alone instrument system, or as part of an advanced instrument or steering system on the boat.


The figures on the next two pages show simplified illustrations for basic and an expanded IS20 system.

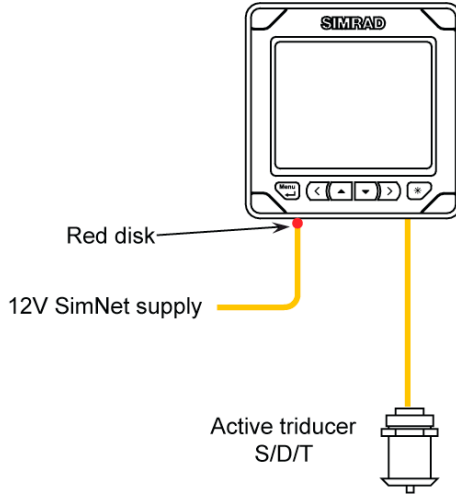

IS20 Combi, Basic system

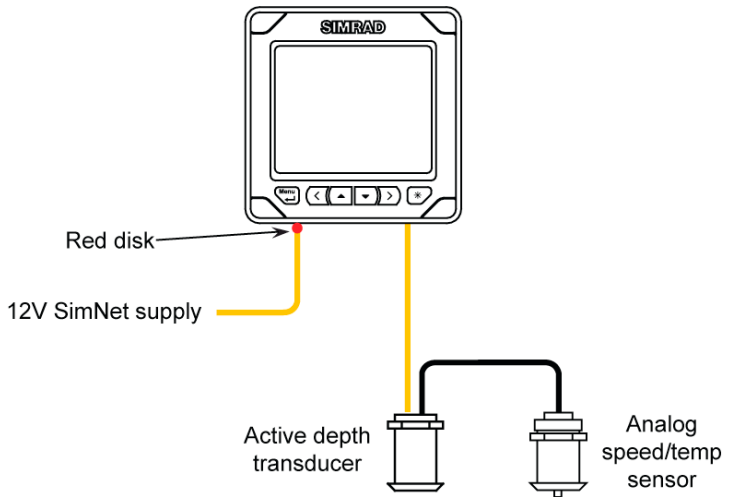

IS20 Combi, Basic system with 2 sensors

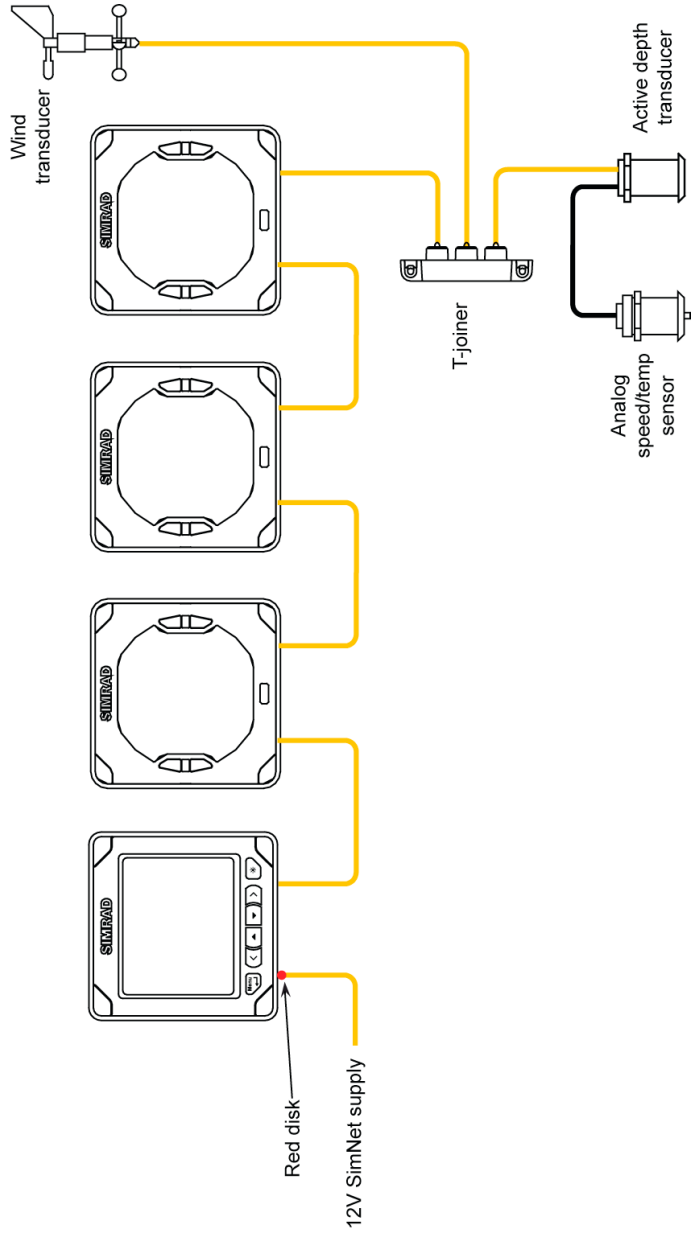

IS20 Expanded system

2 Operation



It is required to read and understand the content in this chapter. The remaining descriptions and illustrations in this manual assumes that the user is familiar with how to operate keys and how to navigate in the menus!

Turning the IS20 on

IS20 has no power key, and will be running as long as power is connected.



The IS20 includes a power save function. Refer to page 16.

When power is connected, the start up page will show:



- Product name
- Serial number
- Software version
- Release date

After approximately 5 seconds the instrument is operative.

First time start up

Before the IS20 is ready to operate, it should be configured as described in **Configuration**, page 47 and onwards.

Restarting the IS20 instrument


When IS20 is re-powered the display will go directly to the last active page after the start up sequence is finished.

Backlighting

The display backlight may be adjusted at any time.



- 1 Press the light key

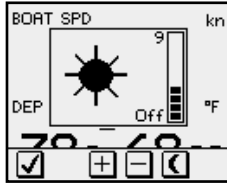

The Light level overlay window will be displayed on top of the current view.

- 2 Press one of the keys as described below to change the display backlight:



- a The **Light** key to increase the light level by one step
- b The **Up/Down** softkeys to increase/decrease the light level by one step
- c The **Day/Night** softkey to toggle between day and night profile

If no adjustment is performed within 3 seconds, the Light level overlay window will disappear.


For contrast and day/night settings, refer to ***Changing the display settings***, page 28.

Scrolling through data pages

The IS20 Combi is pre-configured with 4 instrument pages.



The instrument will scroll through the pages by using the **Up** and **Down** keys .

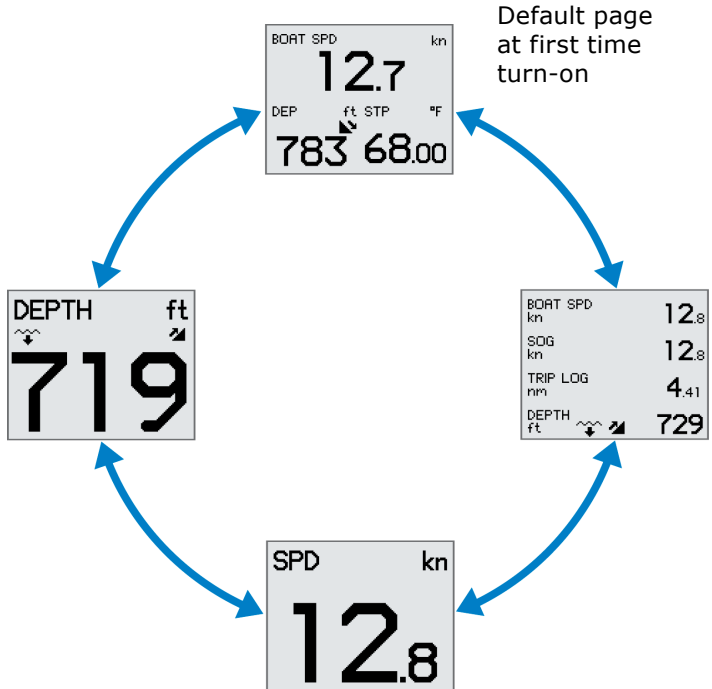


Operating the menu system



All functions and settings in the IS20 are available from the menu system, activated by pressing the **Menu/Enter** key.

The main menu items give further access to sub menus and various settings.

The set values are usually presented in the window's right column, but could also be listed in an overlay window.

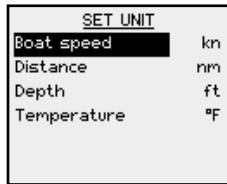

Unit settings presented in the window's right column



Language settings presented in an overlay window


Use the keys as shown below to navigate in the menu system:

Key	Single press	Press and hold
	Confirm a selection/parameter setting	
	Go to next menu level/parameter settings	
	Go to previous menu level/parameter listing	Return to normal operation and the last active data page
	Go to previous/next menu item, increase/decrease parameter value	

When the basic operation of a key is changed, a softkey symbol will be displayed right above the key to indicate the alternate function.




Menu illustrations

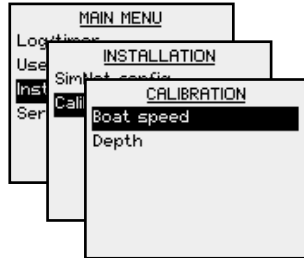


In this manual, the first steps in a menu operation are illustrated by overlapping menu windows.

When more detailed illustrations are required to show key presses and screens, this is shown as below:

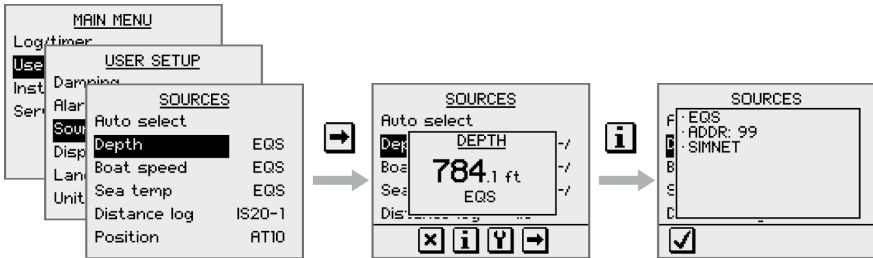


Locking and unlocking the keys

 The IS20 keys may be locked to prevent any unintended operation.



The key lock function is enabled by pressing the **Menu/Enter** and the **Light** keys simultaneously.

A locked instrument has a padlock symbol in the upper left corner.

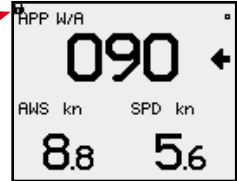


When the keys are locked, any key press will activate the **Disable key lock** overlay window. The key lock function is then disabled by pressing the **Menu/Enter** key.



Power save function



The power save function is activated by pressing and holding the **Light** key for 3 seconds.

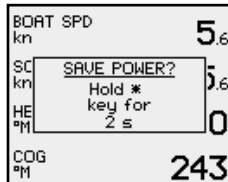

A dialog will show how long the **Light** key has to be remained pressed before the function is activated.

When power save is activated, the display will be turned off.

Any key press or activated alarm will disable the power save function.

3 The log/timer functions

The timer function

The timer function is used to measure time and distance after a race start.




When a timer page is displayed, basic key operation is replaced by functions indicated by softkeys.



The timer is by default shared between interconnected SimNet units, and all timer values will be identical. The units can however be set up in separate SimNet Display groups as described on page 23.

The softkey functions are further described in the following pages.

Setting the countdown time

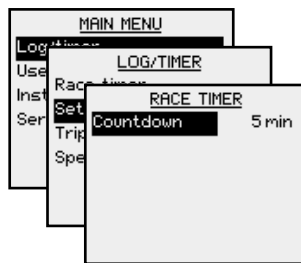


Range	Change per step	Default value
20 min - 1	1 min	5 min



If the countdown time is set to OFF, the timer function will work as a passage log and timer!

Starting the race timer

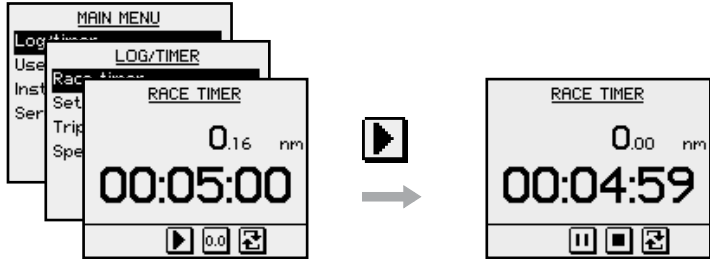

The race timer will continue to run until the **Stop** softkey is pressed even if the race timer page is replaced by another page!



When the counter turns zero, the race log starts to log the distance, the **Synchronize** softkey is removed and the timer function will work as a race timer!

Countdown beep


Time to start	Beeps
1 minute	2
30 seconds	3
5 - 1 seconds	1 per second
0	Long beep

Stopping and restarting the timer



Stop the timer by pressing the **Stop** softkey.

- The timer will stop counting, and the softkeys will change status

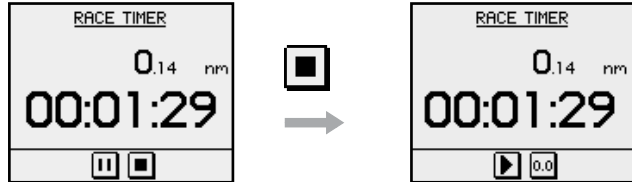

Restart the race timer from the stopped time by pressing the **Start** softkey.



The race timer and race log can be stopped when counting down or counting up!

Resetting the timer



A stopped or paused timer is reset to the pre-set countdown time by pressing the **Reset** softkey.

Synchronizing the timer



The countdown timer may be synchronized to the nearest whole minute at any time by pressing the **Sync** softkey.



The synchronize softkey will not appear if the counter has turned zero!

Freezing the display

The timer display may be frozen at any time while the timer is running. When the display is frozen, the timer remains counting in the background.



Freeze the timer display by pressing the **Freeze** softkey.




The **Freeze** softkey will appear as depressed



Re-press the **Freeze** softkey to return to the countdown view.

Trip logging

The trip log display shows:

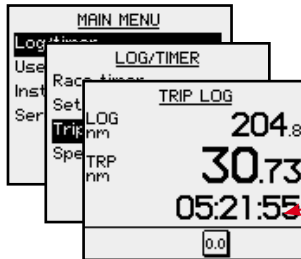

- accumulated total distance since the instrument was installed or from a factory reset
- distance and time since the trip log was started/reset


Resetting the trip log



The trip log is reset to zero by pressing the **Reset** softkey.

Speed logging

The speed log display shows:

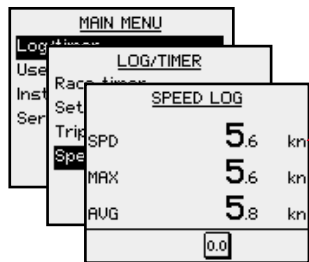

The screenshot shows a menu structure with three overlapping screens: 'MAIN MENU', 'LOG/TIMER', and 'SPEED LOG'. The 'SPEED LOG' screen displays the following data:

Category	Value	Unit
SPD	5.6	kn
MAX	5.6	kn
AVG	5.8	kn

At the bottom of the 'SPEED LOG' screen, there is a small display showing '0.0'. To the right of the screen, there are three red arrows pointing to the 'SPD', 'MAX', and 'AVG' values, with corresponding text labels.

- Current speed
- Max and average speed since the speed log was reset

Resetting the speed log

The speed log will automatically reset when the race timer function is active and turns zero.



The speed calculation is manually reset to zero by pressing the **Reset** softkey.

Blank page

4 Changing the default settings

General




The factory default settings may all be changed from the **User setup** command in the **Main** menu.



*Updating the settings will affect all instruments in the SimNet group. Refer to **SimNet group function**, page 31.*

Setting the damping factors

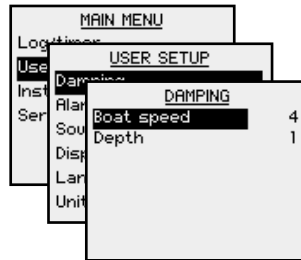

The damping factors determine how fast the display will respond to changes.

The higher damping factor the more stable display reading on the instrument.


Setting	Range	Change per step	Default value
Boat speed	0-9	1	4
Depth	0-9	1	1

Alarm setup

The IS20 may be set up to sound an alarm if vessel or environmental parameters exceeds preferred values.

The alarm monitoring is disabled by setting the value to **Off**.


Boat speed alarm

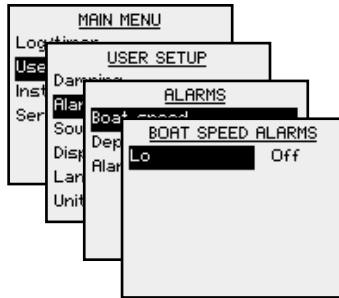

Used to give alarm if the boat speed goes beyond a selected value.

Range	Change per step	Default value
Off - 50 kn	1 kn	Off
50 - 60 kn	5 kn	Off

Depth alarm

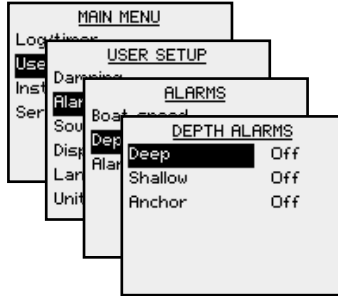

The depth alarm can be set up for deep and shallow water limits.

An anchor alarm can be activated to warn if the boat is drifting. The alarm will sound when during a 40 seconds time period there is a change in depth of 2-3 meters (6–10 ft).



The Anchor alarm should be turned Off when the boat is not at anchor!


Alarm	Range	Change per step	Default value
Deep	Off - 650 ft	1.6-5: 0.1 ft 5-10: 0.5 ft 10-50: 1 ft 50-100: 5 ft 100-500: 10 ft 500-650: 50 ft	Off
Shallow	Off - 320 ft	1.6-5 0.1 ft 5-10: 0.5 ft 10-50: 1 ft 50-100: 5 ft 100-320: 10 ft	Off
Anchor	Off - On	-	Off

Updating the data sources

A data source can be a sensor or a device connected to SimNet, providing information and commands to other SimNet devices.


The data sources are normally configured at first time turn on. It should only be necessary to update this data if a new source is added, if a source is missing (sensor failure), or if a source has been switched off/on.

Automatic source update

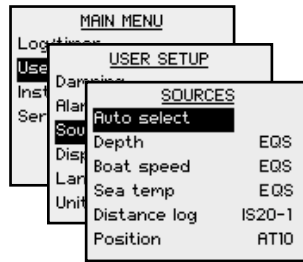

The **Auto select** option will look for all sources connected to the instrument system. If more than one source is available for each item, the IS20 will automatically select from an internal SimNet priority list.

- 1 Verify that all interfaced units are powered on
- 2 Press the **Menu/Enter** key to start the auto select procedure

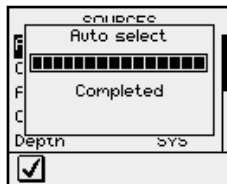

The operator will be noted when the Auto select process is completed.





*If more than one source is found for each source item, see **Manual source selection**, page 27.*

Manual source selection

If more than one source is available for each item, the preferred source may be selected manually.


As an example, the following illustrations show how the compass source is changed.

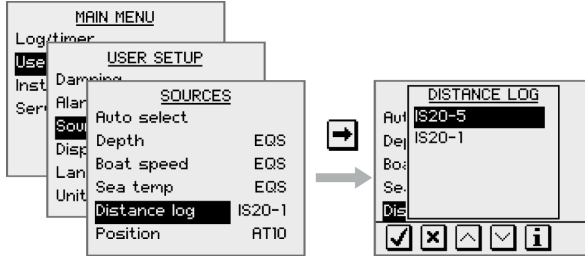

 The position source provides Speed Over Ground (SOG).

- Select the preferred data source and confirm with the **OK** softkey.

Displaying source information

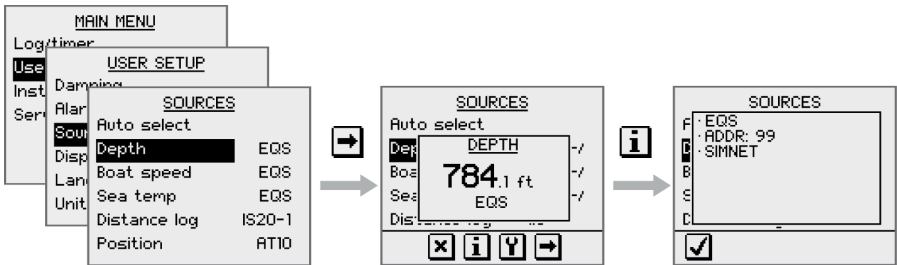

Changing the display settings

The display is controlled by two user profiles that can be individually adjusted.


The profiles are **Day profile** and **Night profile**. The profiles can be optimized for readability under different light conditions, and you can quickly switch between the two using the Light key. Refer to **Backlighting**, page 12.

For each profile you can:

- Adjust light level
- Select white or red light color
- Invert the display
- Adjust the contrast




Light color and light level also applies for the keys!

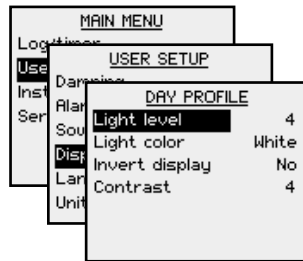

Setting	Range	Change per step	Default value
Light level	9 – Off	1	3
Light color	White/Red	-	White (Day) Red (Night)
Invert display	Yes/No	-	No
Contrast	0 - 9	1	4

Language selection

The language is usually selected when the instrument is turned on for the first time. Refer to **First time start-up**, page 47.

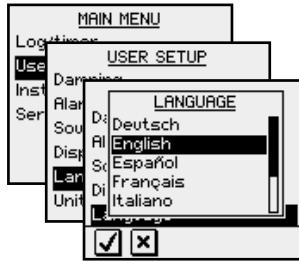

It is, however, possible to change the language at any time.


The following languages may be selected:

- Deutch (German)
- English (English)
- Español (Spanish)
- Français (French)
- Italiano (Italian)
- Nederlands (Dutch)
- Norsk (Norwegian)
- Svenska (Swedish)

The language names are listed alphabetically in their own language.

Default language: English


Changing the units of measure

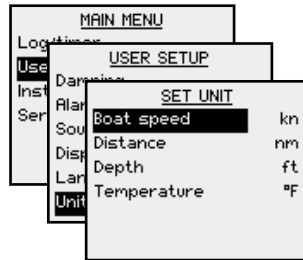

Parameter	Options	Default value
Boat speed	- kn - km/h - mph	kn
Distance	- nm - mi - km	nm
Depth	- m - ft	ft
Temperature	- °C - °F	°F

Changing the SimNet group setup

The SimNet groups are normally configured during installation, but may be changed at any time.

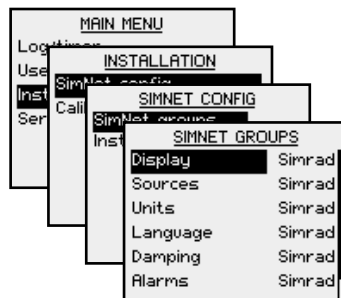

SimNet group function

The SimNet group function provides global control of groups of units. This option is used on larger vessels where many units are connected via the SimNet network.

By assigning several units to the same group, a function change or update on one unit will have the same effect on the rest of the group members.

The table below shows available SimNet groups.


Function	Groups	Default
Display	Simrad, None, 1-6	Simrad
Sources	Simrad, None	Simrad
Units	Simrad, None, 1-6	Simrad
Language	Simrad, None, 1-6	Simrad
Damping	Simrad, None, 1-6	Simrad
Alarm	Simrad, None, 1-6	Simrad
Power save	Simrad, None, 1-6	None

- Simrad: Default group for IS20
- None: Not assigned to a group
- 1-6: Group numbers

The figures on next page illustrates how the instruments on a flybridge and in a cockpit are assigned to separate language, damping and display groups, and how this affects the setup for the different instruments.



*The SimNet groups are configured during system configuration. Further information about how to set up the groups are found in **SimNet groups**, page 52.*

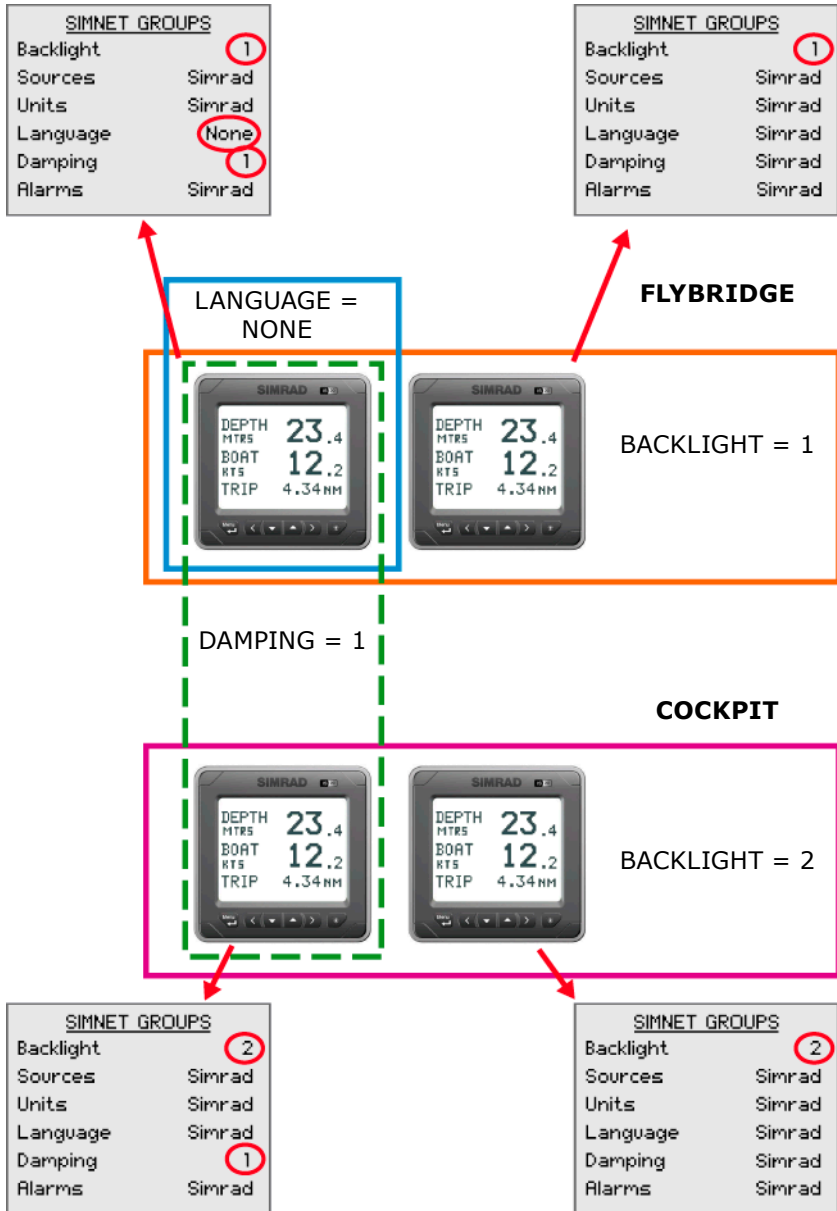

5 IS20 Alarm system

Alarm indication

The alarm system in IS20 Combi is activated if any alarm settings are exceeded. Refer to **Alarm setup**, page 24.

BOAT SPD kn	5.6
SOG kn	5.6
HEAL °M	40
COG °M	243

When an alarm is notified, the alarm will be indicated with an alarm text and with an audible alarm.

The different alarm indications are shown in the table below.

Alarm type	Sound	Light	Reminder interval
Vital alarm	Alternating between 2 tones	Switching on/off	10s
Important alarm			20s
Standard alarm		40s	
Warning	Single beep		60s
Light warning	Single beep		

If IS20 Combi is connected to other SimNet units, any alarm in the system will be displayed on the instrument.

If no specific alarm text is displayed, an alarm code will appear. Refer to **Alarm codes**, page 34.

Acknowledging an alarm

An alarm is acknowledged by pressing any key. This will remove the alarm notification (text, light and sound) from all units that belongs to the same alarm group. Refer to **SimNet group function**, page 30.

BOAT SPD kn	5.6
SOG kn	5.6
HEADING °M	240
COG °M	243


A reminder will reappear at given intervals for as long as the alarm condition exists.



An alarm received from other SimNet units must be rectified on the unit generating the alarm!

Viewing active alarms

A list of any existing alarm condition may be displayed at any time.

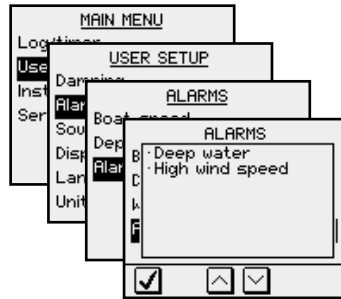

Alarm codes

If the alarm is received from other units connected to SimNet, the alarm text may not be displayed. The alarm condition will then be indicated in a code.

A description for available codes is listed in the table on the next page.

Alarm ID	Alarm
10	Shallow water
11	Deep water
12	Anchor alarm
13	Wind shift
14	True wind speed too high
15	True wind speed too low
16	Boat speed too low
17	Voltage too high
18	Voltage too low
19	Depth data missing
20	Wind data missing
21	Nav data missing
22	Compass data missing
23	Off course
24	Rudder data missing (RF25)
25	Rudder feedback failure (RF300)
26	Rudder response failure
27	Drive overload
28	High temperature
29	Bypass/clutch overload
30	Bypass/clutch disengaged
31	High drive supply
32	Low drive supply
33	No active Autopilot control unit
34	No Autopilot computer
35	ACXX Memory failure
36	No connection with EVC system
37	EVC overdrive
56	RF must be calibrated

Blank page

6 Installation

Location of the unit

The IS20 should be mounted with special regard to the unit's environmental protection, temperature range and cable length. Refer to page 59.

Avoid mounting the control unit(s) where it is easily exposed to sunlight, as this may shorten the lifetime of the display.

Mechanical installation


Panel mounting

The mounting surface must be flat and even to within 0.5 mm.

- 1** Drill the 4 mounting holes and make a panel cut-out according to the drilling template included in the package
- 2** Use the supplied 19 mm selftapping screws to secure the control unit to the panel
- 3** Apply the front panel corners




Do not over-tighten the screws!

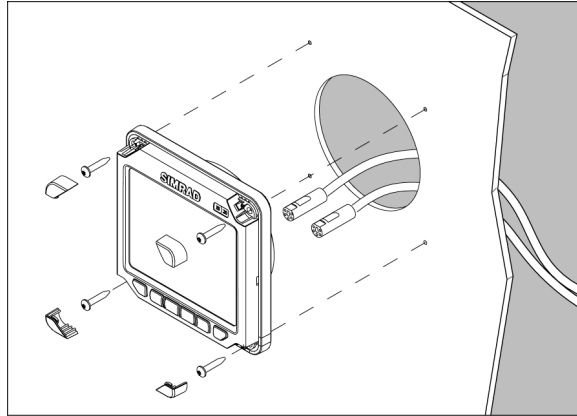

Bracket mounting

An optional bracket is available for the IS20.

The illustration below shows the mounting details for the bracket.

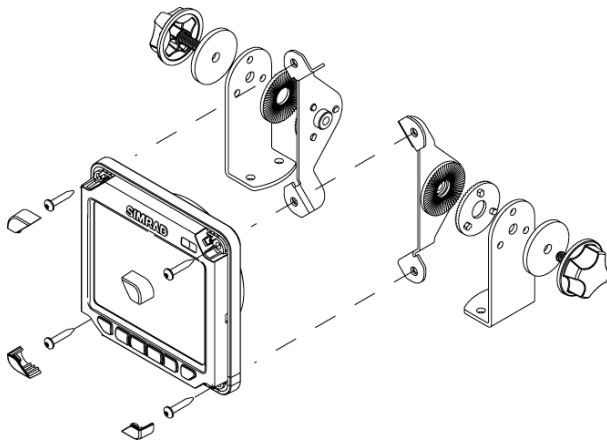

Cable connection

The IS20 Combi may be connected to SimNet network using SimNet cables.



SimNet

The SimNet cable system with very small plugs in both ends makes it easy to run the cables. Only 10 mm (3/8") holes are required through panels and bulkheads.

The SimNet accessory program contains the necessary items to make a successful installation. Refer to **SimNet cables and accessories**, page 58.

SimNet cables

A SimNet unit has one or two yellow SimNet connectors. There are no dedicated "in" or "out" connectors.

Route the SimNet cables with the figures on page 41, 42 and 43 as a guideline. Select cables and accessories from the SimNet accessory program.

Connect products with two SimNet connectors in a daisy chain and use drop cables and T-joiners when required. For cable extension in-line cable joiners are available.



Total length of SimNet cable installed in a system should not exceed 150 meter (500')!

If you plan to extend your SimNet system in the future it may be advantageous to prepare for it by adding a few T-joiners in central locations. The T-joiners provide easy access to the network and can be replaced with a new product, or the new product can be connected via a drop cable.



The connectors are weather proof according to IP66, when properly installed. All unused SimNet connectors must be fitted with the plastic cap to protect them against dirt and moisture.

SimNet power and termination


The following rules should be observed when installing SimNet:

- 1** It must have a separate 12VDC power from the battery bus or the circuit breaker board to reduce interference
- 2** It must not be connected to the supply voltage terminals of the Autopilot Computer
- 3** It will power a SimNet compatible instrument system. Hence SimNet to other equipment can be supplied via the autopilot, see the figures on page 41, 42 and 43
- 4** SimNet must be properly terminated, i.e. unless it is a small system (see the figure on page 41) there must be terminations at each end of the Simrad backbone


The SimNet network has to be terminated according to the number and type of products connected.

In a small system consisting of maximum 5 SimNet products and a total length of 5 m SimNet backbone cable, you only need the SimNet power cable with built-in termination (red disc on cable plug).


For additional information about SimNet, ask for the separate SimNet Manual.

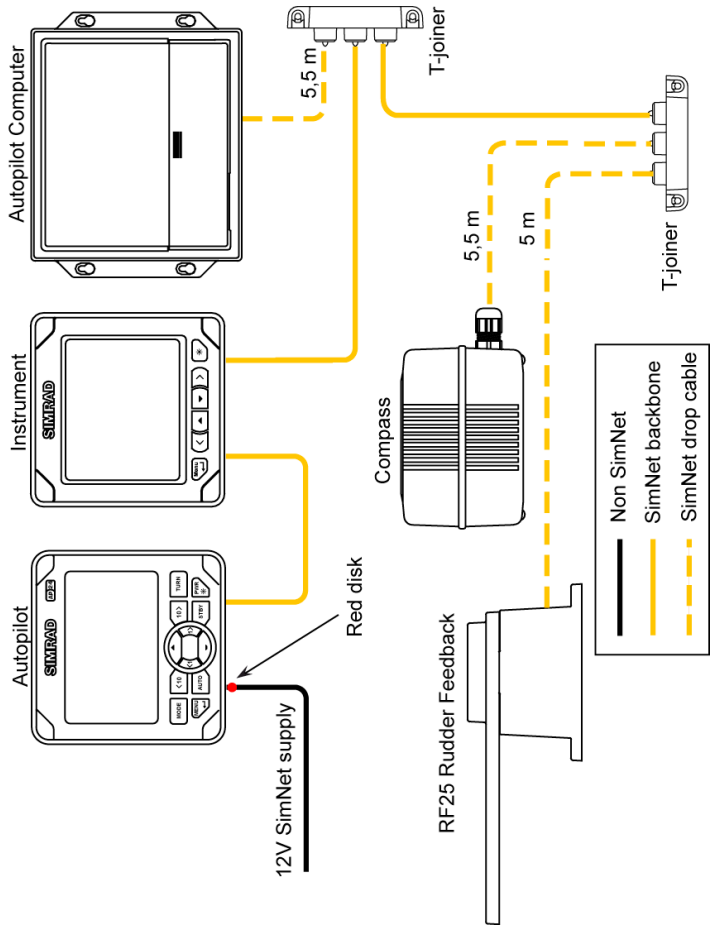

SimNet network, small system

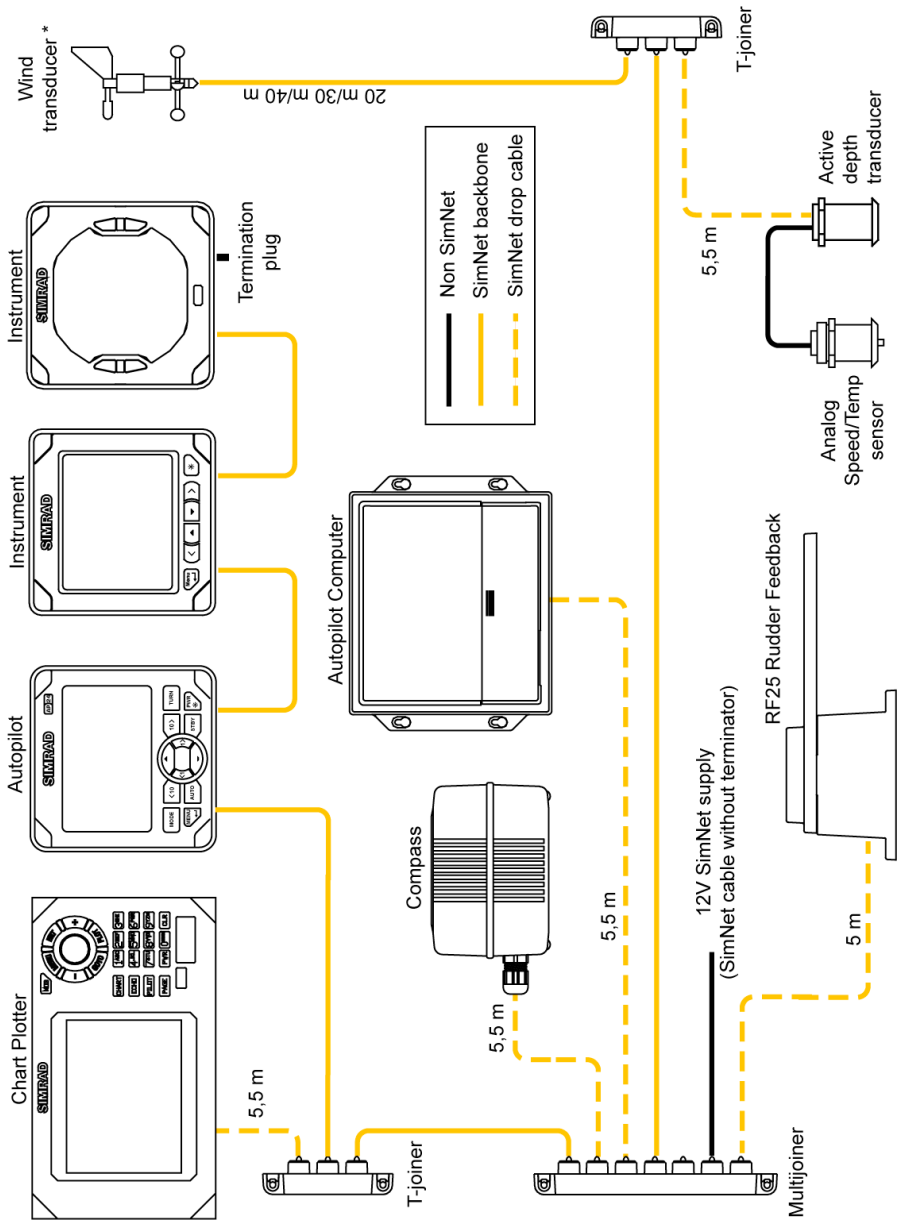

SimNet network, medium system

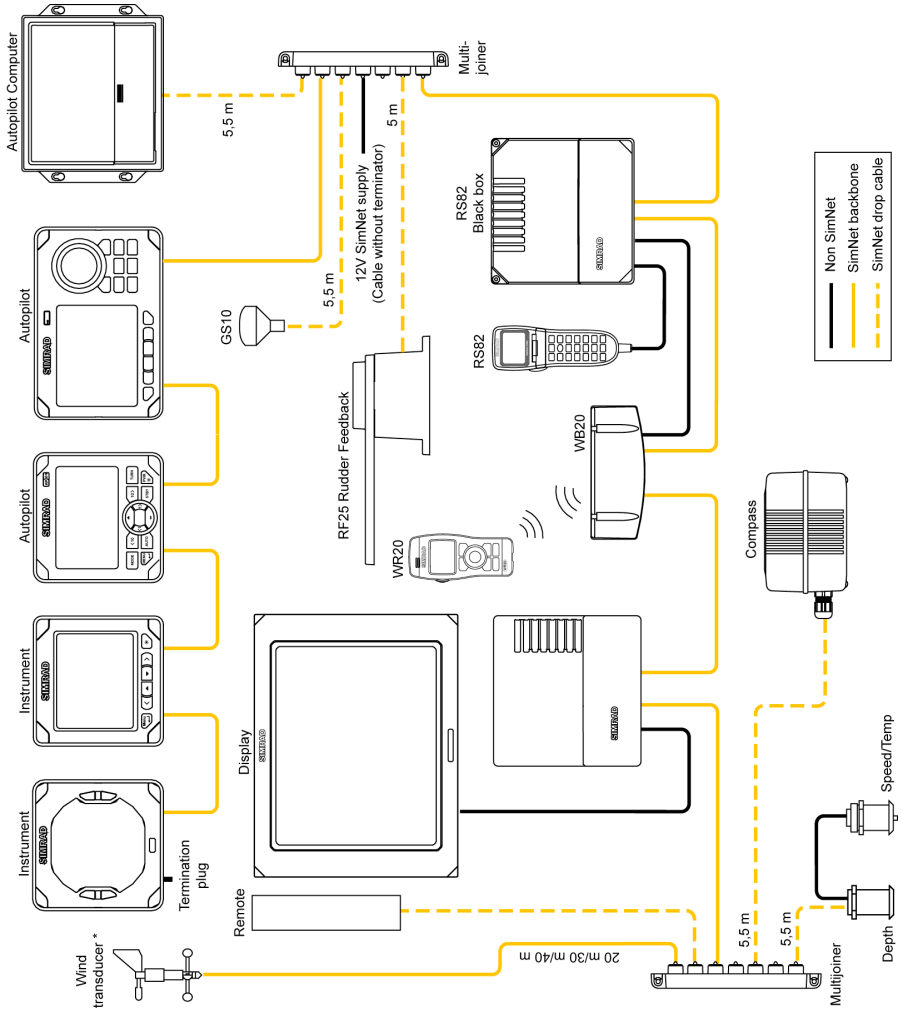

SimNet network, expanded system




- 1** Maximum total length of SimNet cables is 150 m (500 ft.)
- 2** Drop cables must not exceed 6 m (19 ft) of length and the total length of drop cables must not exceed 60 m (200 ft).
- 3** Equipment should not be daisy-chained in a drop cable.
- 4** The wind transducer (*) has a built-in terminator.

Connecting IS20 to an NMEA2000 network





No daisy-chain connection is permitted between SimNet units when connected to an NMEA2000 network!

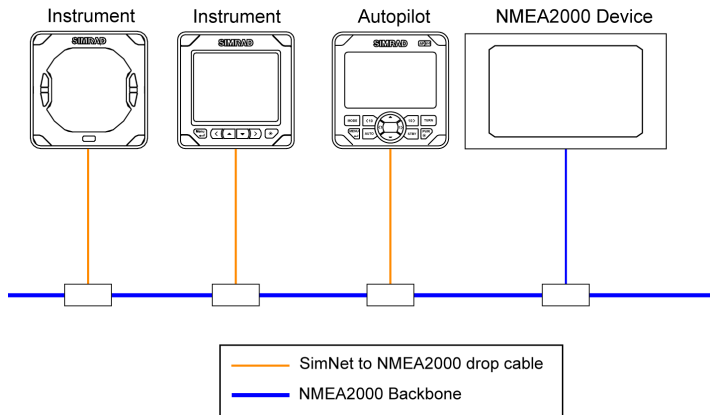

Use the SimNet cable (part no. 24005729) to connect the IS20 to an NMEA2000 network.

Demo mode

The IS20 includes a demo mode, useful for demonstrations and on show.

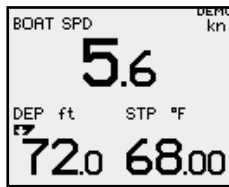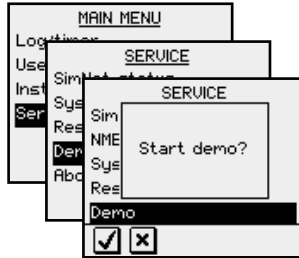

Active demo mode is indicated with flashing **DEMO** text in the upper right corner of the page. The demo indication will flash more frequently on the demo source than on units that are reading the demo values.

Demo mode is turned OFF by using the menu as illustrated above. An automatic source selection will then be performed.



Demo mode must be turned OFF on the same unit where Demo mode was turned ON!


Blank page

7 Configuration

First time start-up

When the IS20 is powered on for the first time, the instrument will run through an automatic start-up sequence, presenting:

- 1 Product name, serial number, software version, release date
- 2 Language selection
- 3 Automatic data source selection

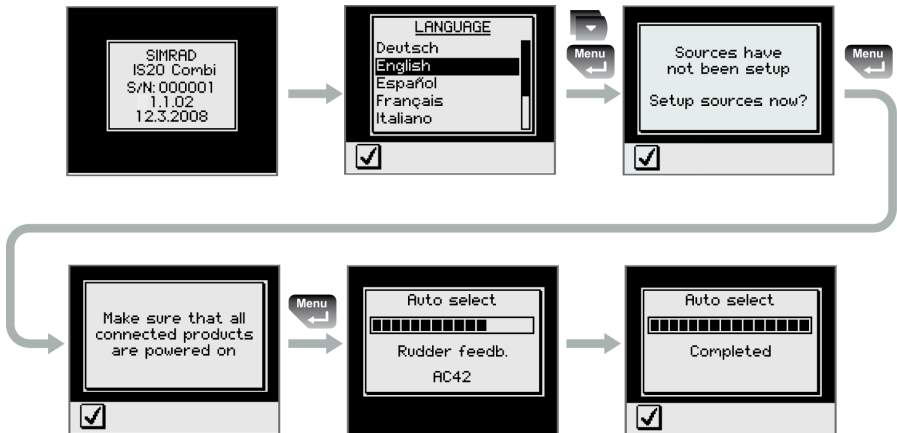


Press the **Menu/Enter** key when the start-up procedure is completed. This will change the display to the default Speed/Depth/Temperature page.

Calibration


After installation, certain functions in the system must be calibrated to adapt to the physical position and type of sensors installed.

All calibration is initiated from the **CALIBRATION** sub menu.

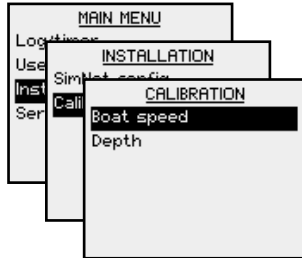

Boat speed

The hull shape or the location of the speed sensor may cause incorrect speed readings, and calibration is required to ensure that correct speed and log readings are displayed.

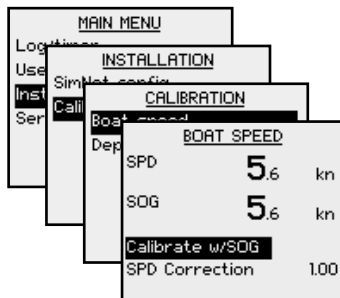

Calibrate by speed over ground

With a GPS connected to the system, the speed may be automatically set identical to the speed over ground value.

This adjustment should be made in calm sea with no effect from wind or tidal current.

- 1** Bring the boat up to cruising speed (above 5 knots)
- 2** Select **Calibrate w/SOG** and press the **Menu/Enter** key to start the calibration
- 3** When the calibration is completed the **SPD Correction** factor is set to 1.00

BOAT SPEED		
SPD	5.6	kn
SOG	5.6	kn
Calibrate w/SOG		
SPD Correction	1.00	

Manually adjust the speed value

If you experience an incorrect speed reading this can be manually re-adjusted as follows:


- Compare the speed reading with that on another boat
- Run the boat at constant speed over a known distance in both directions and average the speed reading

Then adjust the **SPD Correction** factor to get the correct speed reading.

Range	Change per step	Default value
-0.50 - +1.50	0.01	1.00


Depth

The default value for the depth offset is 0.0, which indicates the displayed depth from the transducer to the seabed (b). Refer to the illustration on the next page.

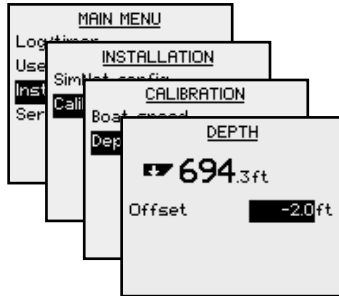

The value should be increased or decreased, depending on whether the depth reading should be from the water line or from the keel, respectively:

- A negative offset equal to the vertical distance from the transducer to the keel will display the depth as measured from the vessel's keel (a)
- A positive offset equal to the vertical distance from the transducer to the water line will display the depth as measured from the water line (c)


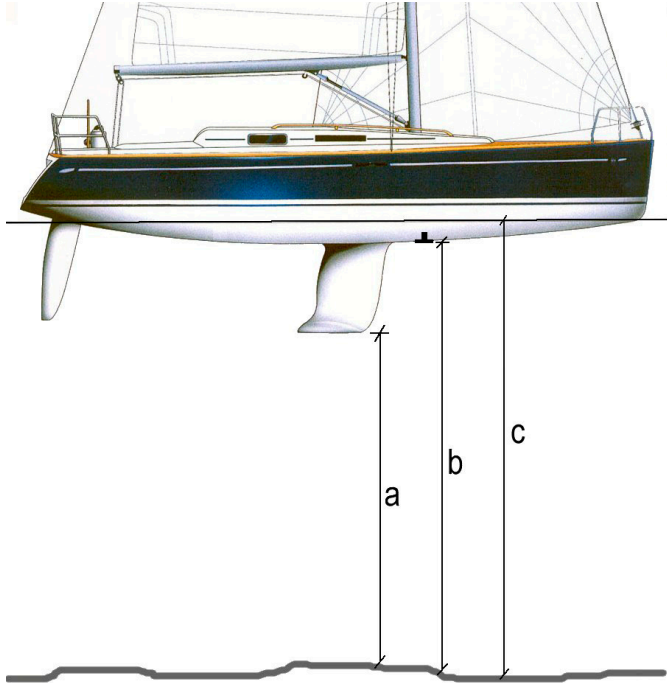


The symbol in front of the depth reading will change to indicate that the depth is measured from:

the keel

or

the water line

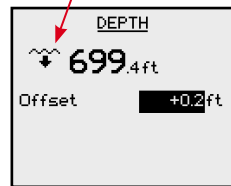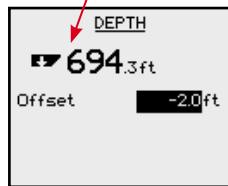


Range	Change per step	Default value	Units
-10 - +10	0.1	0.0	m, ft

SimNet groups

The SimNet group function is used to globally control parameter settings in groups of units. The function is used on larger vessels where several units are connected via the SimNet network.


By assigning several units to the same group, a parameter update on one unit will have the same effect on the rest of the group members.

For additional information about SimNet groups, refer to **SimNet group function**, page 31 and onwards.

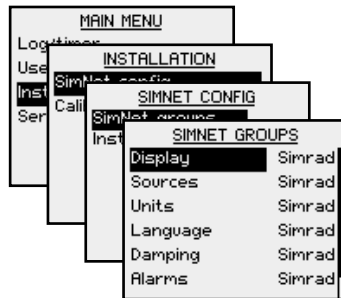

Setting the unit's instance number

The instance number is used to identify multiple units of the same model when connected to a SimNet or NMEA2000 network. The instance number is added to the product name e.g. IS20-3 for easy identification of the unit.

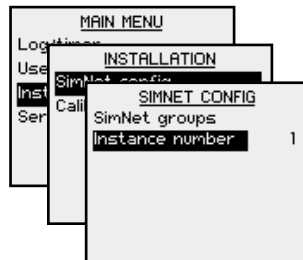

Range	Change per step	Default value
0-63	1	0

8 Maintenance

General maintenance

The IS20 instruments are “repair by replacement” units, and the operator is therefore required to perform only a very limited amount of preventive maintenance.


If the unit requires any form of cleaning, use fresh water and a mild soap solution (not a detergent). It is important to avoid using chemical cleaners and hydrocarbons such as diesel, petrol etc.



Make sure that all open SimNet connectors are fitted with a protection cap (part no. 24006355).


Always put on the weather cover when the unit is not in use.

Service information

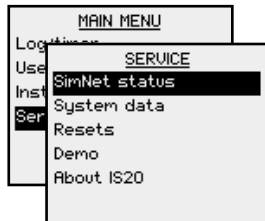


The main menu includes a **Service** item giving access to several options for displaying data used when testing or trouble shooting the system.

SimNet status

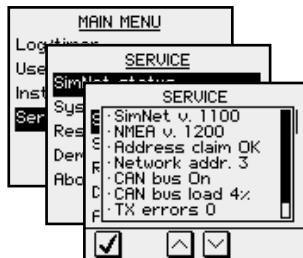


The SimNet status screen provides status information about the different SimNet messages used by the system.

System data

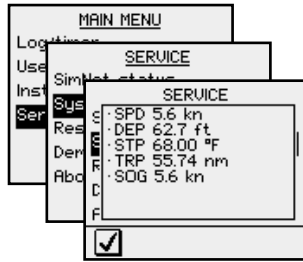

The System data screen provides status information about the different NMEA messages used by the system.

Resetting the instrument system

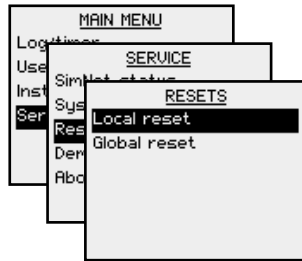

The reset options will reset the instrument to default settings.



The Installation and Setup procedures must be repeated after a reset has been performed!

Two different reset options are available:


Local reset: Resets the selected instrument

Global reset: Resets parameters on the selected instrument and all other units that share parameters with this instrument.

Displaying instrument information

By selecting the **About IS20** menu item, an information window will display instrument model, software version number (1.0.), software release (02) and date of release.

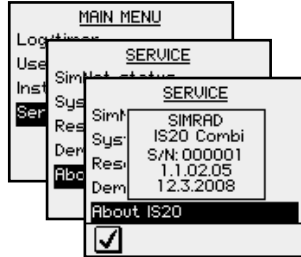


 

The shown readout is only an example!



Blank page

9 Spare parts

Spares and auxiliaries

Part no.		Description
22098784		IS20 Graphic instrument head
22096630		IS20 mounting kit including: - 4 screws - 6 corners - 1 SimNet blocking plug
22096515		IS20 Weather cover
22096820		IS20 Mounting bracket
24006355		SimNet blocking plug
22098495		NMEA0183 Interface cable 2.5 m (8')

SimNet cables and accessories



Art. no.	Description
24005829	0.3 m (1') SimNet cable (SDC:0.3M)
24005837	2 m (6.6') SimNet cable (SDC:02M)
24005845	5 m (16.6') SimNet cable (SDC:05M)
24005852	10 m (33') SimNet cable (SDC:10M)
24005860	SimNet T-joiner (SDJ) (3p)
24006298	SimNet Multijoiner (7p)
24006306	SimNet Bulkhead T-connector
24005878	SimNet cable gland
24005886	SimNet protection plug
24005894	SimNet termination plug
24005902	2 m (6.6') SimNet power w/termination
24005910	2 m (6.6') SimNet power w/o termination
24005936	AT10 Universal NMEA0183 converter
24005944	AT15 Active T-connector, IS15
24005928	SimNet cable protection cap
24005729	SimNet cable to Micro-C male Cable that connects a SimNet product to a NMEA2000 network
24006199	SimNet cable to Micro-C female cable that connects a NMEA2000 product to SimNet
24006363	SimNet cable, 5.5 m (18'), with 1 plug

10 Specifications


Technical specifications

Weight: 0.3 kg (1.1 lbs)
Power consumption: 1.3 W
SimNet Network load (NL) 2 NL
Color: Black
Display:
 Type: Backlit LCD matrix display
 Resolution: 130 x 104 pixels
 Illumination (Red or white): Adjustable in 10 steps
Environmental protection:
 Front: IP56
 Back: IP43
Safe distance to compass: 0.3 m (1.0 ft.)
Temperature:
 Operating: 0 to +55 °C (+32 to +130 °F)
 Storage: -30 to +70 °C (-22 to +158 °F)

Dimensional drawings

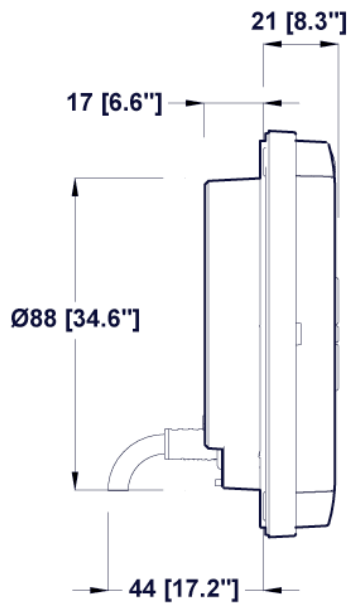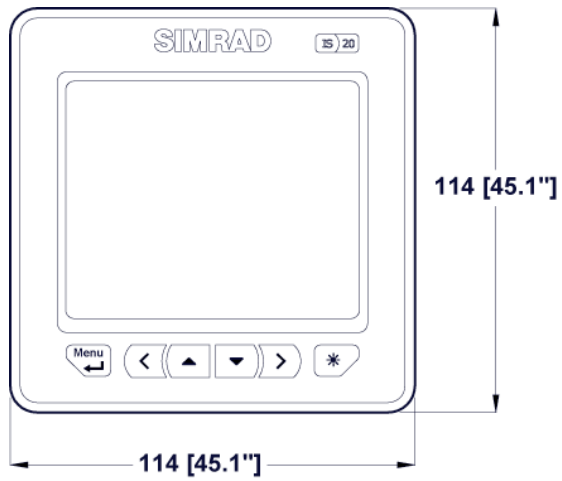

Menu flow chart

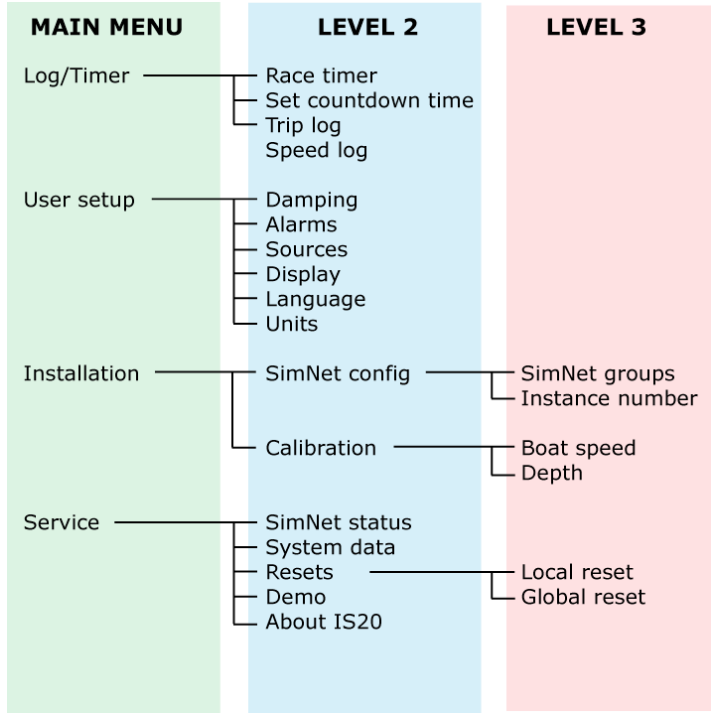

IS20 Combi Manual EN, Doc.no.20222774, Rev.B



SIMRAD

Master the Elements